




Step 1: Using the back plate - mark on the wall the position of the top hole. Drill a hole there and go to step 2

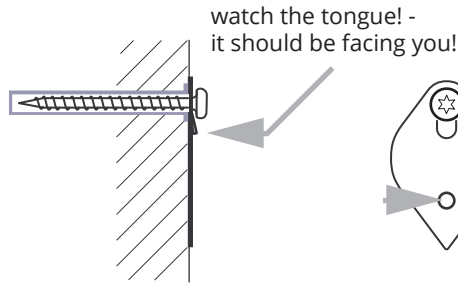


Step 2: Insert the plastic plug in the hole - screw the back plate to the wall using the top screw - do not tighten the screw!

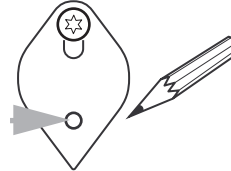


Step 3: Let the back plate stand straight - mark the position of the bottom hole.

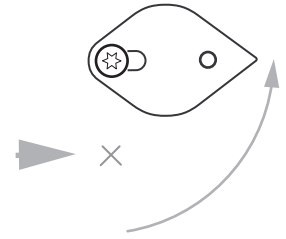



Step 4: Rotate the back plate in order to drill the bottom hole and insert the plastic plug in the wall.

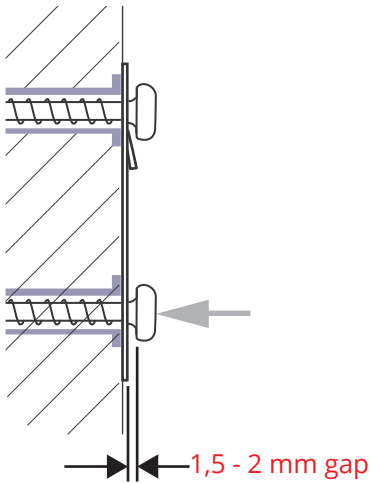


Step 5: Screw the bottom screw to the wall also. Do not tighten fully - allow 1,5 -2 mm gap on both screws so as to be able to insert the Apeiro over the screw heads

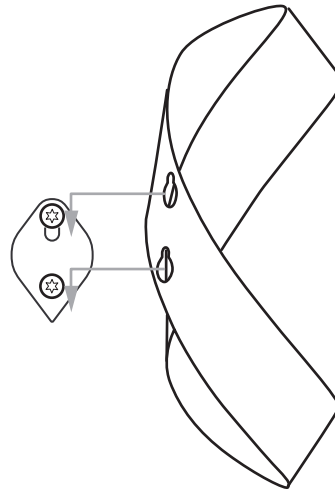

Step 6: Insert the Apeiro over the screw heads and press down until you feel a small "click". If in doubt, try to lift the Apeiro from the back plate. If it comes out easily then tighten the screws a bit more (as in step 5) and try again. If you can not put the Apeiro over the screw heads then make the gap (step 5) bigger and try again.

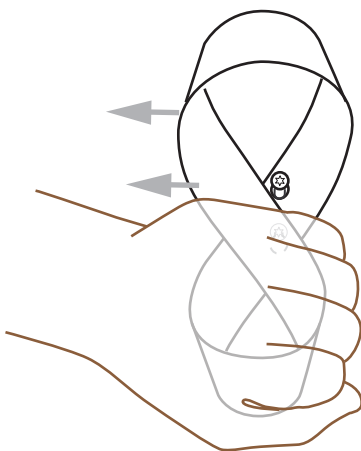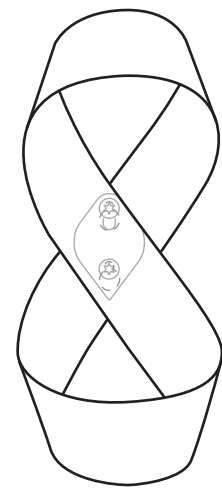

Step 7: In order to tighten the top screw you need to bend **very gently** the Apeiro until you have access to the top screw head. Compress, **very gently**, the bottom part of the Apeiro (see above) by holding it in your fist and squeezing. Tighten the top screw head only. The bottom screw does not need to be tightened.

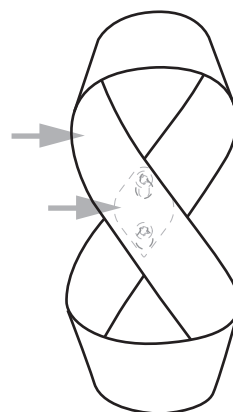

Step 8: Pull or push, **very gently**, with both hands, the front part of the Apeiro back to its original position. Adjust so it is symmetrical.

Important Note:

The Apeiro coat-hook, due to its complexity, is formed entirely by hand. Small differences in its geometry will exist even between the two pieces enclosed in each pack.